


- 10" square metal head with blue plastic housing
 - Turn off power to machine
 - Unscrew the 4 screws holding on the head unit to the wall mounted Z-Bracket



- Pull the square head straight up. **Be careful not to hit/break quartz tube inside the housing**




- Once head is moved up a few inches firmly grab the Porcelain section of the lamp

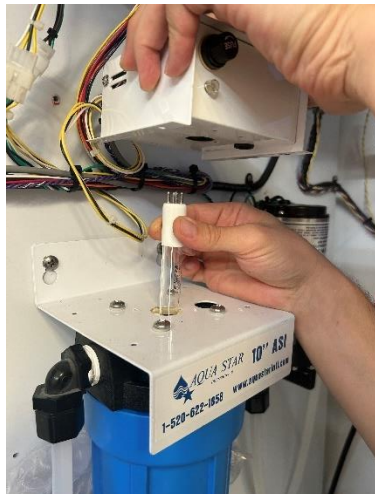

- Carefully remove current lamp by gently wiggling the head unit side to side while simultaneously pulling up

- You might have to *SLIGHTLY* wiggle lamp from side to side
- Once lamp is separated from head unit pull up on the lamp until the lamp has cleared the housing
- Grab the top porcelain section of the new lamp
- Insert the new lamp in to the UV housing $\frac{3}{4}$ of the way
- Gently connect the lamp with the socket in the head unit
 - The pins are not perfectly squared in position they are a slight rectangle, thus can only be inserted in 2 directions
 - Once the pins have been aligned with the socket correctly gently push pins into socket

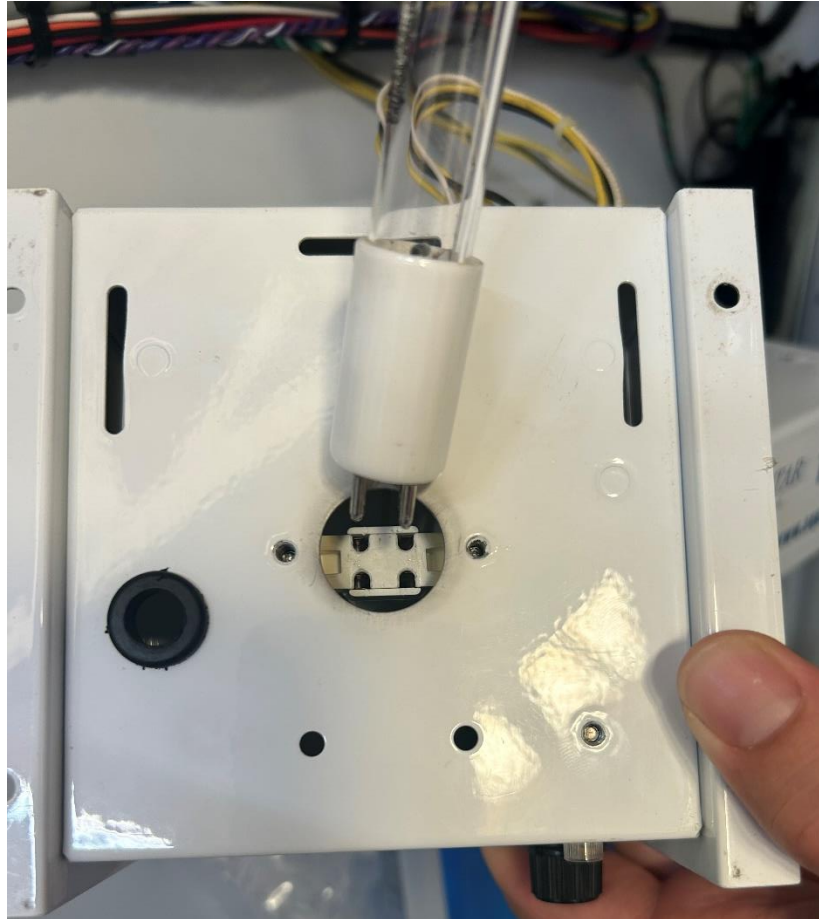

- Once head is flush on the Z-bracket use the 4 screws to secure the head unit to the Z-bracket
- Turn on power & verify LED light comes on below the fuse holder on the UV head